



UV-C DISINFECTION
EQUIPMENT FOR THE TREATMENT OF DRINKING WATER

DOMESTIC SERIES

UV 405-412-440-450-480-550-80/2 LCD – LCD PLUS



MANUAL OF INSTALLATION, USE AND SERVICING



CONTENS

1.	Introduction.....	2
2.	General Principles and Safety Instructions.....	3
3.	Instructions for installation and setting at work.....	5
3.1	Suggested Installation Scheme.....	6
4.	UV Chamber Installation.....	7
4.1	UV chamber assembling.....	7
4.2	UV Chamber Detailed Drawing.....	9
5.	Electrical panel installation and operation.....	10
5.1	Control Panel Description.....	10
5.2	Electrical panel installation and operation.....	11
5.3	Switch ON / Switch OFF the lamps.....	11
5.4	Control Panel Detailed Drawing.....	12
6.	LCD Electrical Board Description.....	13
6.1	Single-lamp LCD electrical board description (UV 405, 412, 440, 480).....	13
6.2	Two-Lamp LCD electrical board description (UV 450, 550, 80/2).....	14
6.3	LCD Display board Description.....	15
7.	Display Information (Troubleshooting).....	16
8.	Maintenance.....	22
9.	Warranty Conditions.....	23
10.	Declaration of Conformity EC.....	24

1. Introduction

This manual is for the following models of LCD SERIES:

UV 405-412-440-450-480-550-80/2 LCD-LCD PLUS

This Pressure UV Systems is manufactured by **S.I.T.A. s.r.l.**

Warning: This equipment requires regular maintenance to ensure the requirements of the drinking water treated and the maintenance of the improvements as stated by the manufacturer.

These operating instructions contain important information for the operation and maintenance of the equipment.

Please ensure that these operating instructions are carefully read by all relevant persons before putting into operation, to ensure the safe use of the UV system. The operating instructions are an integral part of the equipment supply.

Before putting into operation, all the conditions necessary for safe operation of the equipment must be fulfilled.

The installation, commissioning and maintenance of the equipment should only be carried out by qualified personnel.

The equipment should only be operated by authorized personnel who have been trained accordingly.

No modifications should be made to the equipment without consulting S.I.T.A., as this could affect the safe operation of the unit. S.I.T.A. shall not be held responsible for damage resulting from unapproved modifications.



INSTRUCTION:

The operating instructions are to be kept where they will be accessible for operating and maintenance personnel.

2. General Principles and Safety Instructions

Information about UV irradiation:

The UV disinfection system of the LCD series have been planned specially for destroying harmful bacteria and viruses present in your water.

Their working is based on a physical principle which is a warranty of security: the output of ultra-violet irradiation.

The UV light given out by special mercury vapours lamps (UV-C rays $\lambda = 254\text{nm}$) is highly germicidal because it interacts with DNA and RNA, at a molecular level.

The deep bio-structural disorder caused by such irradiation interferes with the development and the ability of reproduction of every kind of micro-organism, making it harmless.

Generally it is better to mount a pre-filter before the UV sterilizer, in this way the impurities of every nature and consistence are kept.

This system comes to be necessary if we want to have a high degree of sterilization, infact the non-filtration and removal of suspended particles in the water has, as a consequence, a decrease of the sterilizer's efficiency.

If the water to be treated contains sulphydric acid or more than 0.3 p.p.m. of iron or filtrable solids, once passed through the sterilizer, it leaves a residual sediment on the quartz sleeve, which, therefore, must be periodically cleaned (the frequency depends on the quantity and quality of water treated).

General directions:

According to the European rules EN 60204-1 (safety of the set-up off the electrical equipment-general rules) the low tension electrical instruments (rule 2014/35/UE) must be connected to a current-tap provided with grounding.

Electrical Safety Instructions:



The lightning flash and arrowhead symbol is to alert the user to the presence of un-insulated "DANGEROUS VOLTAGE" within the enclosure. The equipment may only be opened if main supply is isolated. The main supply must not be restored as long as the equipment is open. This applies to both the electrical panel and the UV reactor vessel.

ATTENZIONE: Working on live equipment is forbidden.

UV Light Danger:



The light of ultra-violet lamps can cause serious burns to unprotected skin and eyes, therefore it is recommended not to connect it to the current tap without having before ensured the UV lamp in its housing and inserted the PVC cover.

Pressure Danger:

The UV chamber could be under water pressure. Max working pressure is 10 bar. UV chamber must be installed in accordance with our installation and commissioning instructions and used in accordance with operating and maintenance instructions.

ATTENTION: Ensure that system is depressurized before attempting any service or repair

Indications for the disposal:

We remind that, according to what is fixed by D.L. 4 May 2014, N°27 "Accomplishment of directive 2011/65/CE, concerning the reduction of dangerous substances in electric and electronic equipments" both mercury vapours lamps and electrical panels, when no more used, must be considered as special waste, and in the same way disposed of.

To do that, it is possible to address to specialized centres for the recovery of dangerous materials, or to contact directly our technical department.



INFORMATION TO USERS pursuant to art. 14 of the 2012/19 / EU DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE)

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately and not disposed of together with other mixed urban waste.

Please contact your municipality, or local authority, for all information regarding the separate collection systems available in the area. The retailer is obliged to collect the old equipment free of charge when buying new equipment of an equivalent type, for the purpose of starting the correct recycling / disposal.

Appropriate separate collection for the subsequent start-up of the disused equipment for recycling, treatment and environmentally compatible disposal helps to avoid possible negative effects on the environment and on health and favors the re-use and / or recycling of the materials it is composed of the equipment

3. Instructions for installation and setting at work

General premise: The installation of the DOMESTIC SERIES disinfection units must be carried out by specialized staff, scrupulously following the instructions hereby given. It has been moreover considered necessary to give some general information about the electrical and water connections.

Cautions: check that the UV panel is not connected to the power supply and that the tap of the water to be treated is turned off.

- Connect the delivery of the water to be treated to the special water connection
- Turn on water and check for possible leaks in any part of the unit
- Connect the plug to the current tap
- Check that the disinfected water comes out and that the LEDS on the panel of the control board, signal the correct working


Let the disinfected water flow down to outlet for at least 10 minutes before using it, in order to make the possible impurities present in the unit drain out.

NOTE: it is recommended to install a water filter directly before the UV sterilizer in order to remove the suspended particles, eventually present in the water to be treated, which could limit the efficiency of sterilization.

CHECKS

The DOMESTIC SERIES is ready for producing disinfected water, once the connection to the water system and to the electrical grid is carried out. The unit works automatically, the electronical boards which control the signals reaching the control panel, allow the visualizing (or the sounding) of the correct working or of anomalies which may occur during the operating of the unit.

3.1 Suggested Installation Scheme

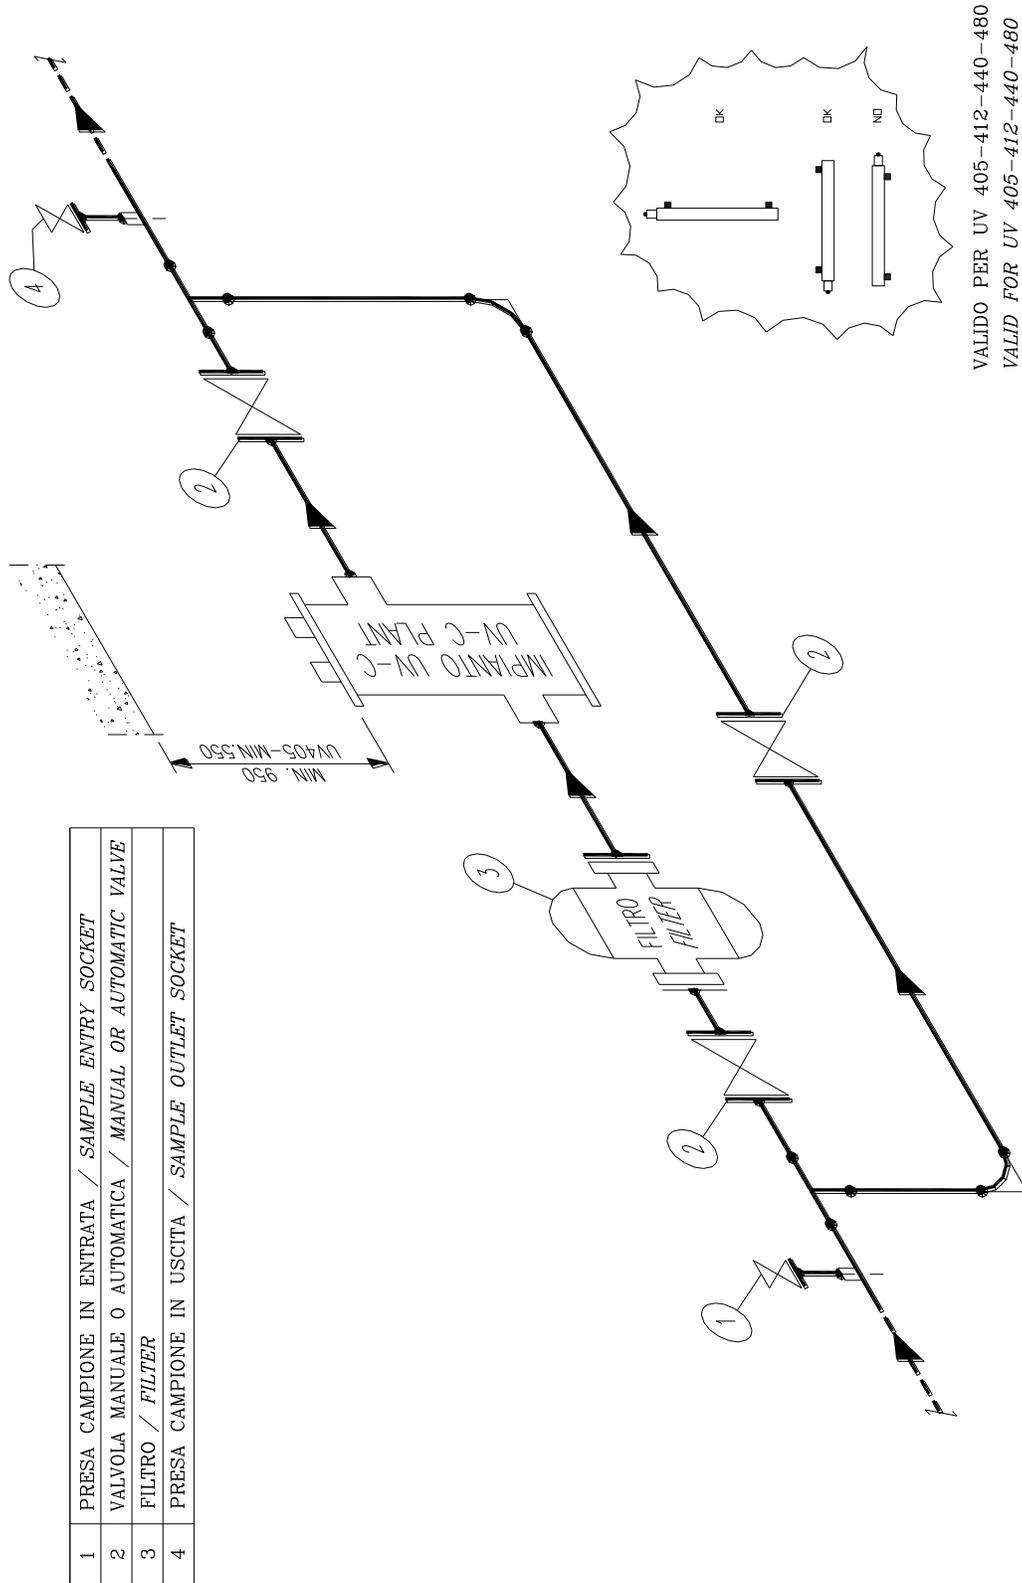


4. UV Chamber Installation



4.1 UV chamber assembling

Mount the valves kit supplied with the system .


Unscrew the sleeve bolts:

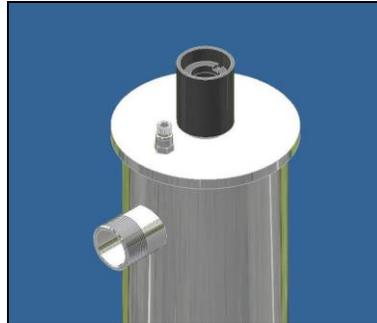


Insert the quartz sleeves carefully centring the spring at the bottom plate of the UV chamber:

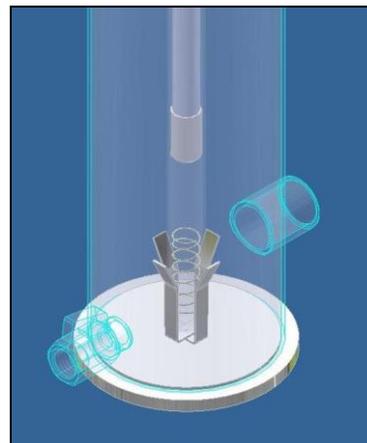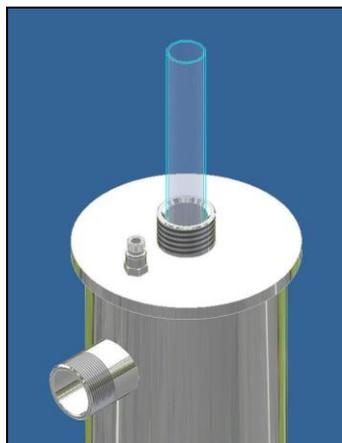


Insert the o-ring Ø 23x4 into the quartz sleeve:

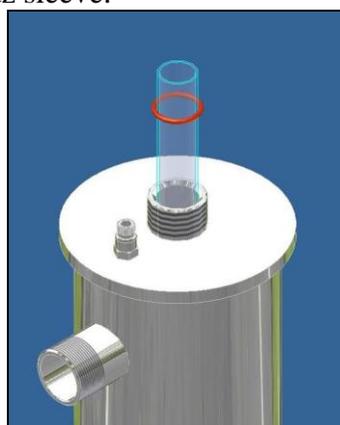

Screw again the sleeve bolts and insert the lamp holder spring into the sleeve:

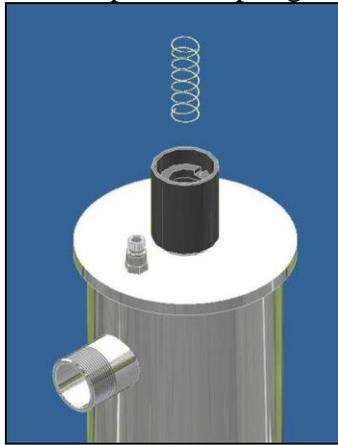


In case of LCD PLUS UV system: Mount the o-ring (3043 type) on the probe holder and screw this one on the $\text{Ø } 1/4''$ bush welded in the middle part of the UV chamber. Finally, connect the pertinent electrical cable:

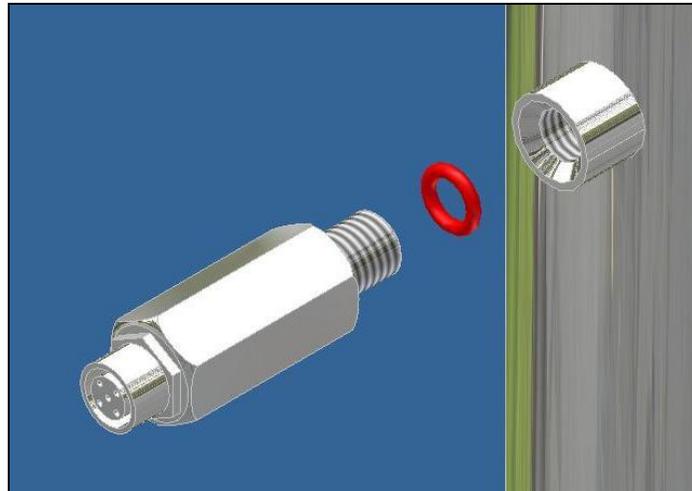

Carry out the hydraulic test, verifying that the o-rings are watertight and that there're not water leaks outside the sleeve bolts or inside the quartz sleeves.

Insert the UVC lamp into the quartz sleeve:

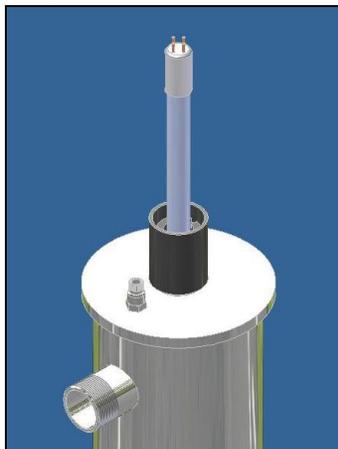

Important!

Handle the lamps using gloves

4.2 UV Chamber Detailed Drawing

RIF./REF.	DESCRIZIONE / DESCRIPTION	CODICE / CODE	UV 405	UV 412	UV 440	UV 480	UV 450	UV 550	UV 80/2
A	LAMPADA UV / UV LAMP	028102	028104	028104	028124	028104	028104	028104	028124
B	GUAINA AL QUARZO / QUARTZ SLEEVE	028103			028105				
C	O-RING Ø 23x4				028061				
D	MOLLA SUPPORTO LAMPADA / LAMP HOLDER SPRING				028036				
E	QUADRI PIN / FOUR-PIN SOCKET				028088				
F	BLOCCAGUAINA NYLON / NYLON SLEEVE BOLT				028060D				
G	TAPPO COPRINTATTO PVC / PVC CONTACT COVER				028034D				
H	SENSORE Ø 1/4" / SENSOR Ø 1/4"				UV737				
I	GUARNIZIONE / GASKET				V141				

REV. A **PRIMA EMISSIONE / FIRST ISSUE** **DATA** 02/12/08 **SCHENONE**

DESCRIZIONE **APPROVATO** **RENDERLO COMUNQUE NOTO A TERZI O A DITE CONCORRENTI SENZA LA SUA AUTORIZZAZIONE SCRITTA**

CODICE / **TITOLO** **UV SERIE DOMESTICA**
F.to **A4** **UV DOMESTIC SERIES**
Scala **/** **LCD / LCD PLUS**
Foglio **01** **di** **01**

FILE: DWG

5. Electrical panel installation and operation



5.1 Control Panel Description




CONTROL PANEL	LCD (PLUS)
Material and colour	Black Polypropylene
Dimensions	215 x 215 x 90 mm
Protection class	IP 55 (IP 65 on request)
Ambient temperature range	5 – 45 °C
Power supply	230 V - 50/60 Hz (115V – 50/60 Hz on request)
Lamp cable	1 m
Power supply cable	1 m
Monitor display	LCD SITA
Hour meter	Yes for total system life
Resettable hour meter	Yes for lamp life control
Lamp function control	Yes
Alarm led	Yes
Free contact (NO - NC)	Yes – general alarm
230 V output (NO - NC)	Yes – general alarm
Remote ON/OFF contact	Yes (settable)
ON/OFF Timer	Yes (settable)
Reactor temperature measurement and alarm	Yes (°C) – settable value (shut off for high temperature) on PLUS MODELS
UV Irradiance measurement and alarm	Yes (% or W/m ² optional) – settable value on PLUS MODELS
4/20 mA output	Optional – for Irradiance and water temperature on PLUS MODELS
Audio alarm	Optional

5.2 Electrical panel installation and operation

The electrical panel of the LCD series is equipped with 2 fixing brackets for wall mounting. Rotating the panel cover the user can have the cable out on the desired sides of the panel.

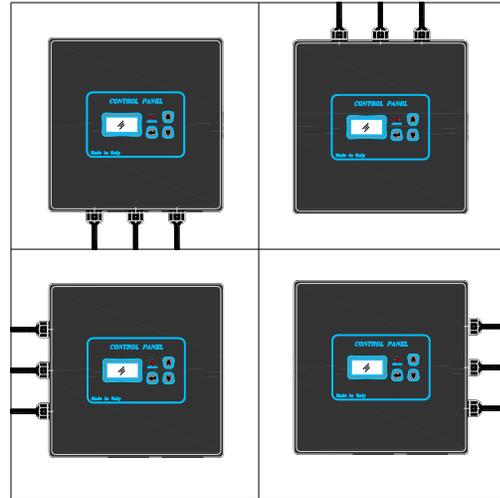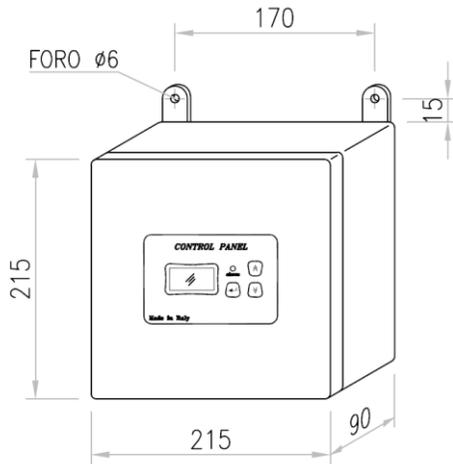

Connect the lamp socket to the lamp, place the ground wire in the slot along the sleeve bolt and connect its terminal to the M4 bolt welded on the UV chamber, insert the contact cover bringing it up to the beat, then rotate it in closure position.

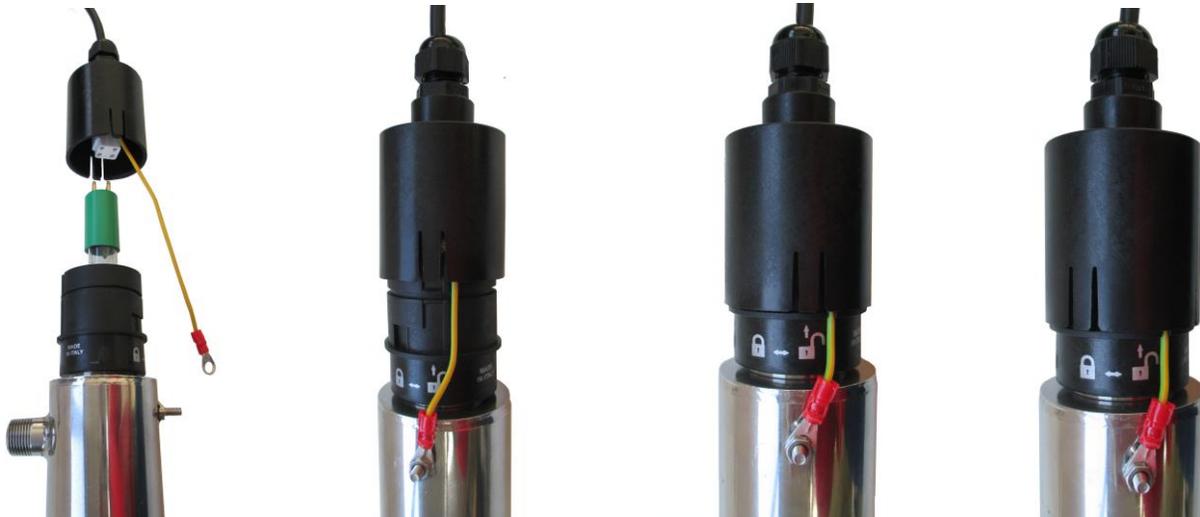

Finally connect the power cable to the socket.

Once connected to the power supply the UV lamp will light on.

Do the following at the first start up and on every lamp replacement:

-) Activate the lamp life count down hour meter (see display description)
-) In case of LCD PLUS system with UV sensor then operate the sensor calibration. This operation must be done after at least 5 minutes from lamp start, with quartz sleeve clean, with sensor measuring window clean and with steady water flow.


5.3 Switch ON / Switch OFF the lamps

Because of the small power of the electrical panel this is not equipped with power selector. Therefore the panel is always powered but lamps can be switch ON/OFF in the following ways:

1. Keeping pushed the OK (↵) button for 5 seconds (see display description)
2. Closing the remote ON/OFF contact (see electrical scheme)
3. Setting the timer (see display description)

6. LCD Electrical Board Description


6.1 Single-lamp LCD electrical board description (UV 405, 412, 440, 480)

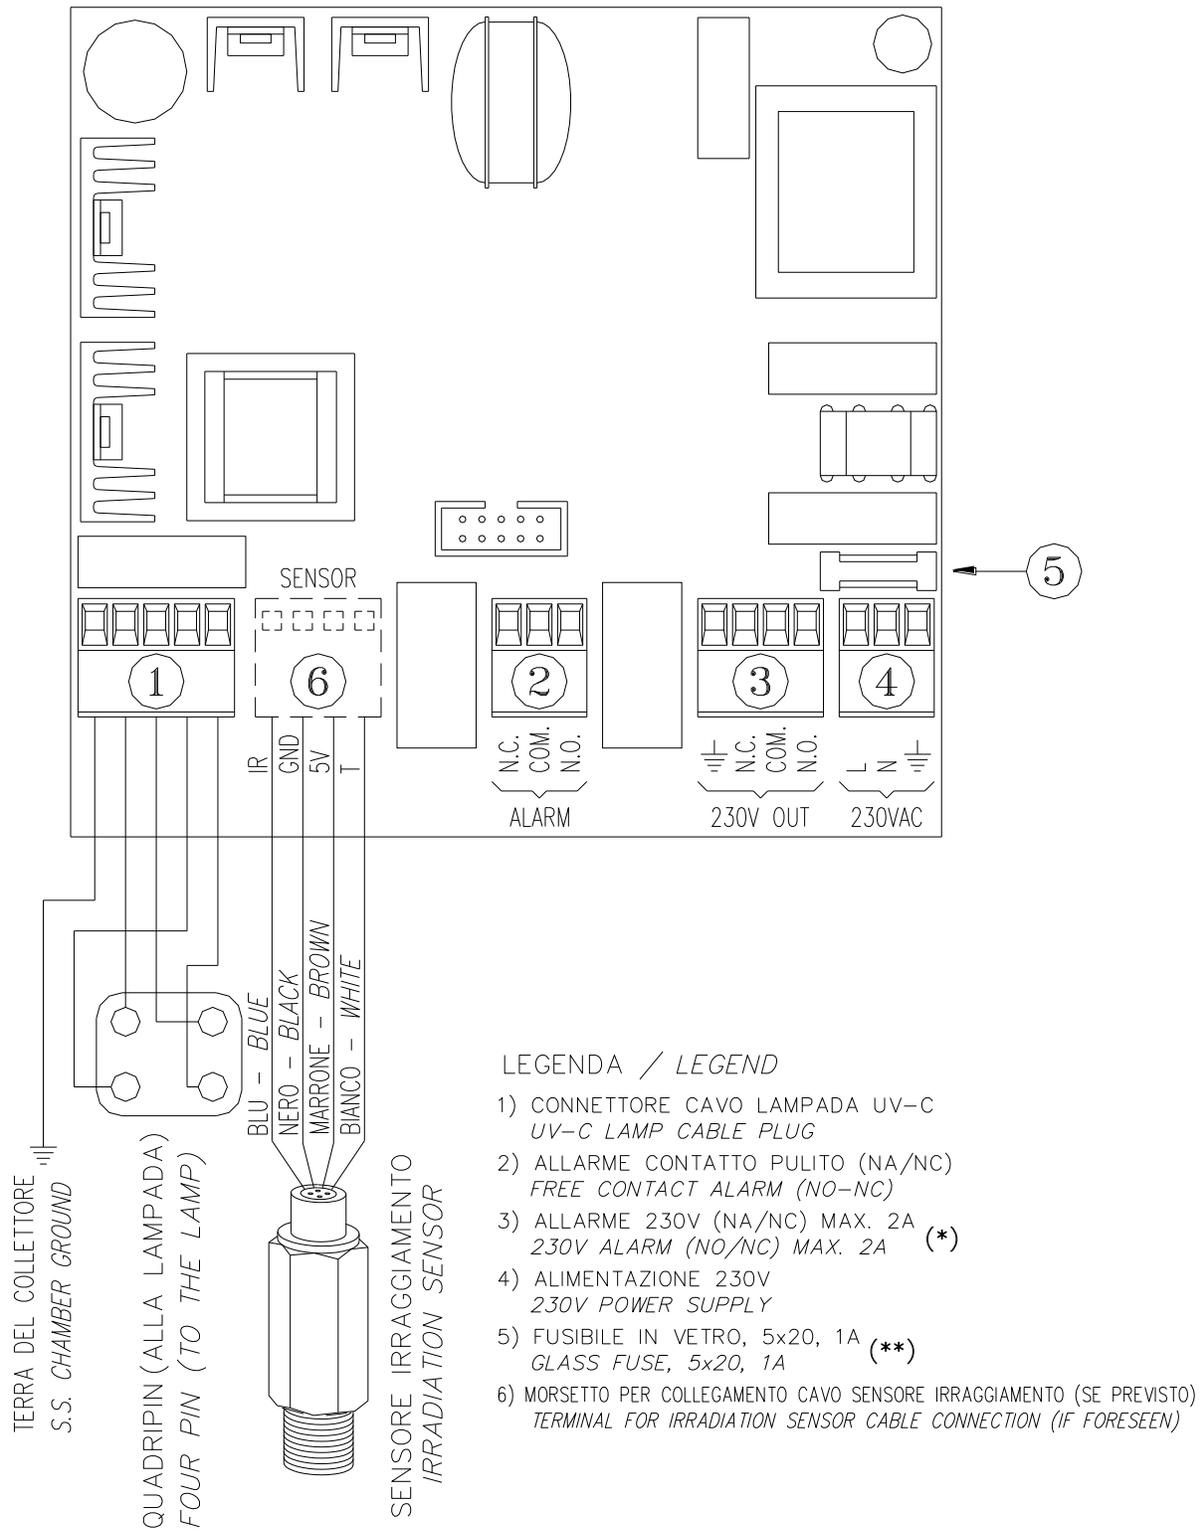

(*) SE COLLEGATO POTREBBE ESSERE NECESSARIO AUMENTARE LA TAGLIA DEL FUSIBILE (5)
IF CONNECTED IT MAY BE NECESSARY TO INCREASE FUSE (5) SIZE

(**) MAX 3.1A SE IL CONTATTO (3) E' COLLEGATO AD UN CARICO
MAX 3.1A IF CONTACT (3) IS CONNECTED TO LOAD

6.2 Two-Lamp LCD electrical board description (UV 450, 550, 80/2)

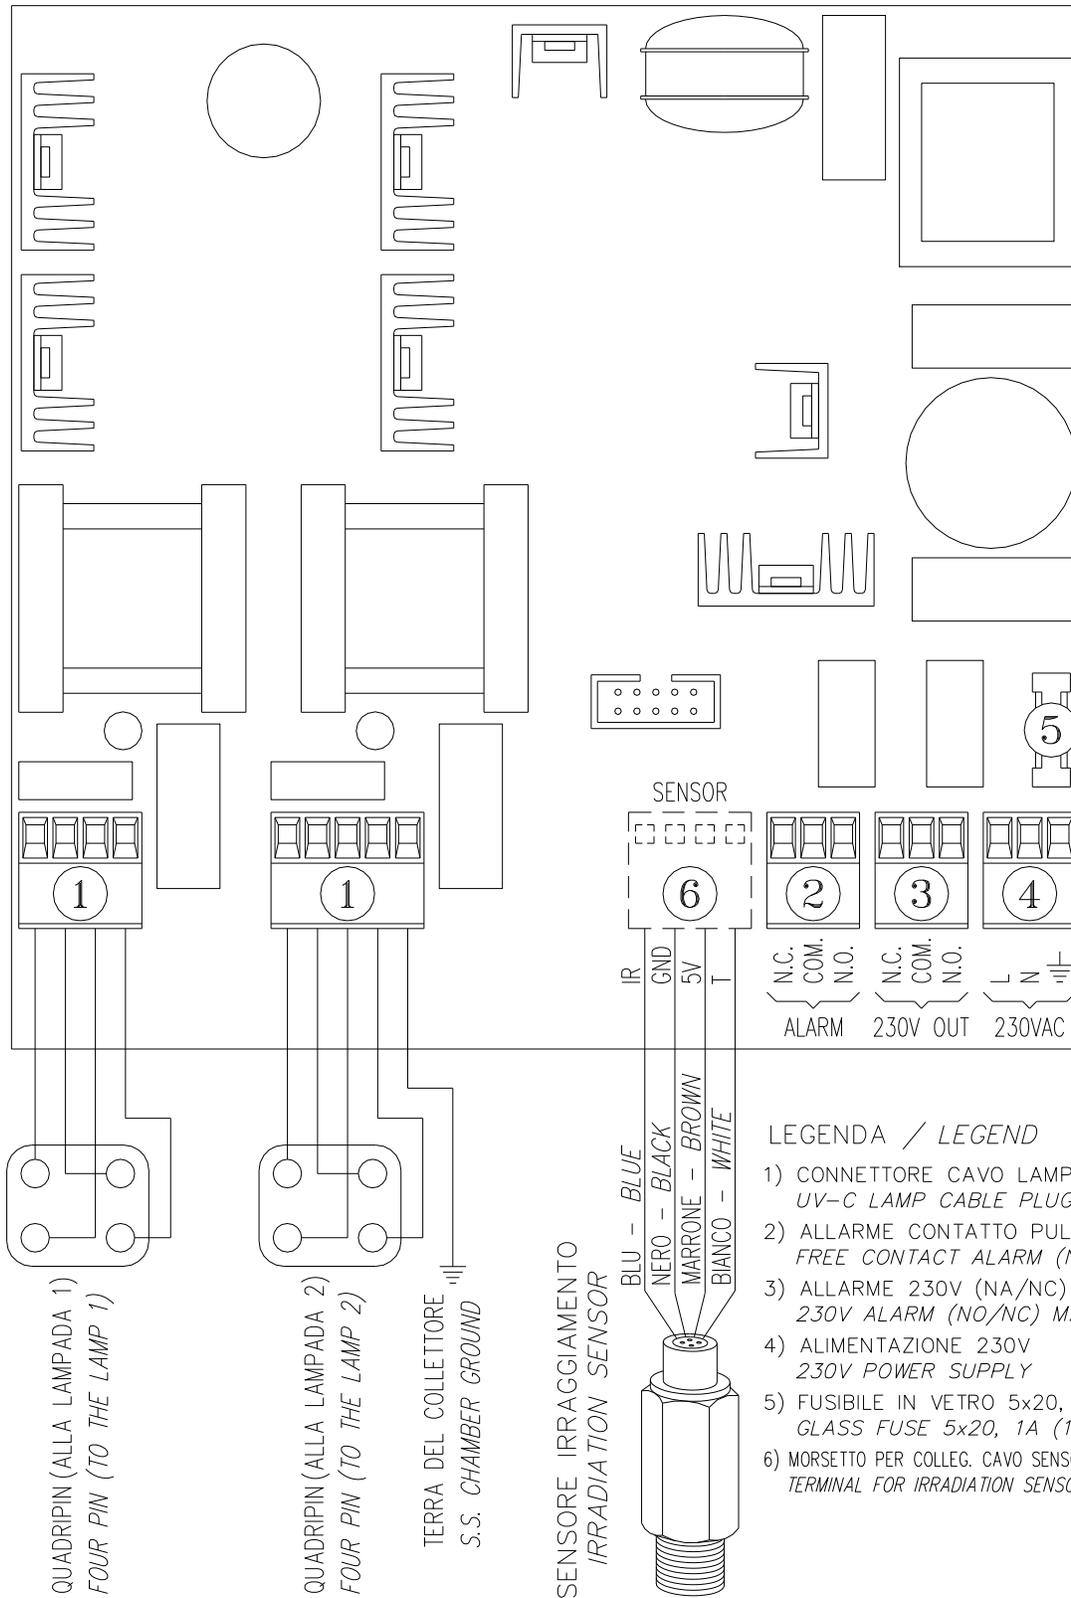

(*) SE COLLEGATO POTREBBE ESSERE NECESSARIO AUMENTARE LA TAGLIA DEL FUSIBILE (5)
IF CONNECTED IT MAY BE NECESSARY TO INCREASE FUSE (5) SIZE

(**) MAX 3.1A SE IL CONTATTO (3) E' COLLEGATO AD UN CARICO
MAX 3.1A IF CONTACT (3) IS CONNECTED TO LOAD

6.3 LCD Display board Description

Following are described the standard and optional terminals connection to the display board:

- It is possible to connect the sensor cable (usually this is connected on the main board).
- It is possible to connect the REMOTE ON/OFF contact, this is powered with 5Vdc that if closed to the RMT contact shuts of the lamps. The user can set the working of the remote ON/OFF contact by the display between N/O and N/C. The factory setting is N/O because it let the system working with nothing connected to the remote ON/OFF terminal.



Important

To high frequency of ON/OFF decreases the lamp lifespan. Max 3 ON/OFF cycles per day are allowed.

- In case of LCD PLUS systems with optional 4/20 mA output then it's possible to connect to the 4/20 mA terminal. This signal is available for the water temperature and the UV irradiance.

The temperature signal has the following correspondence:

$4\text{mA} = 0^\circ\text{C}$

$20\text{ mA} = 100^\circ\text{C}$

The irradiance signal has the following correspondence:


$4\text{mA} = 0\%$

$20\text{ mA} = \text{Settable value on the display (factory setting } 20\text{ mA} = 100\%)$




Important

The 4/20 mA output signal can work with a max load of 150 ohm

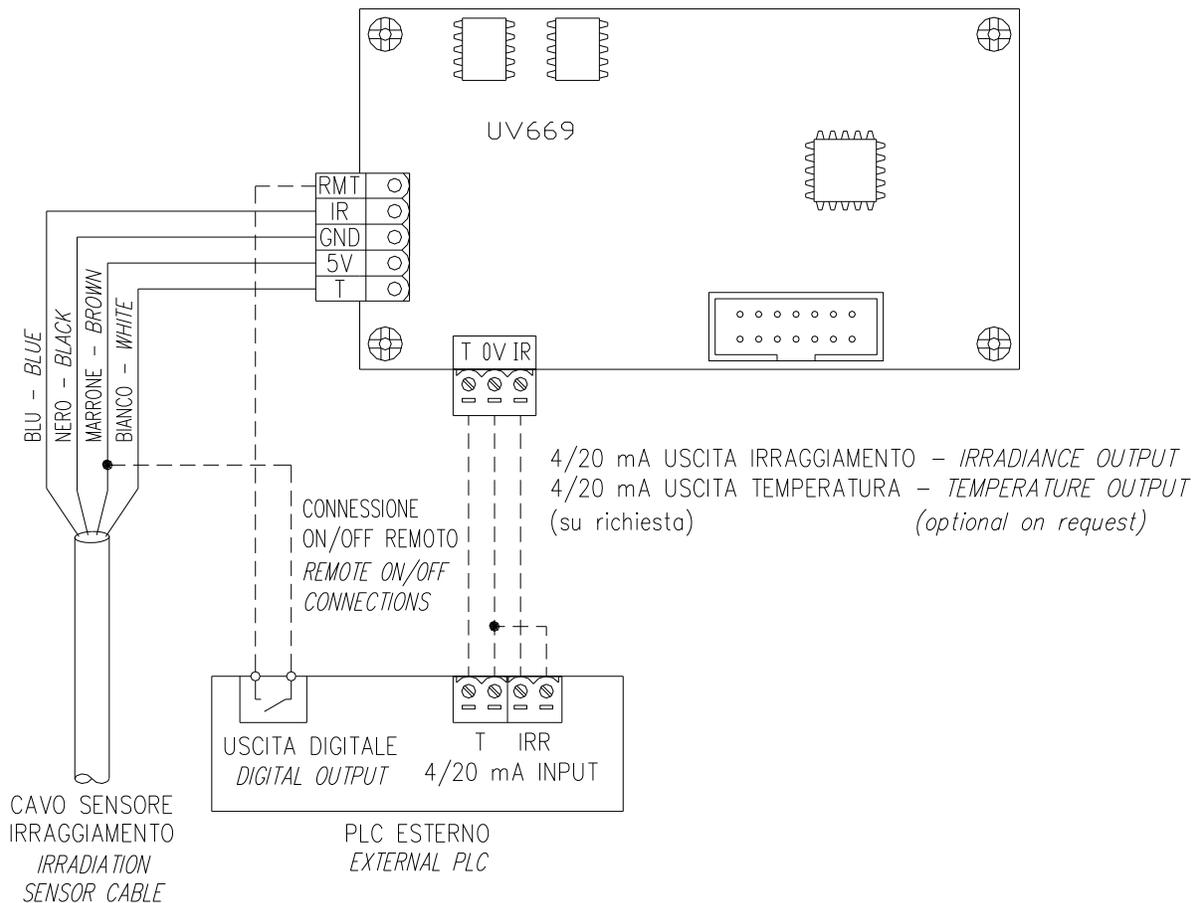


7. Display Information (Troubleshooting)

LCD DISPLAY MESSAGES – Start up:

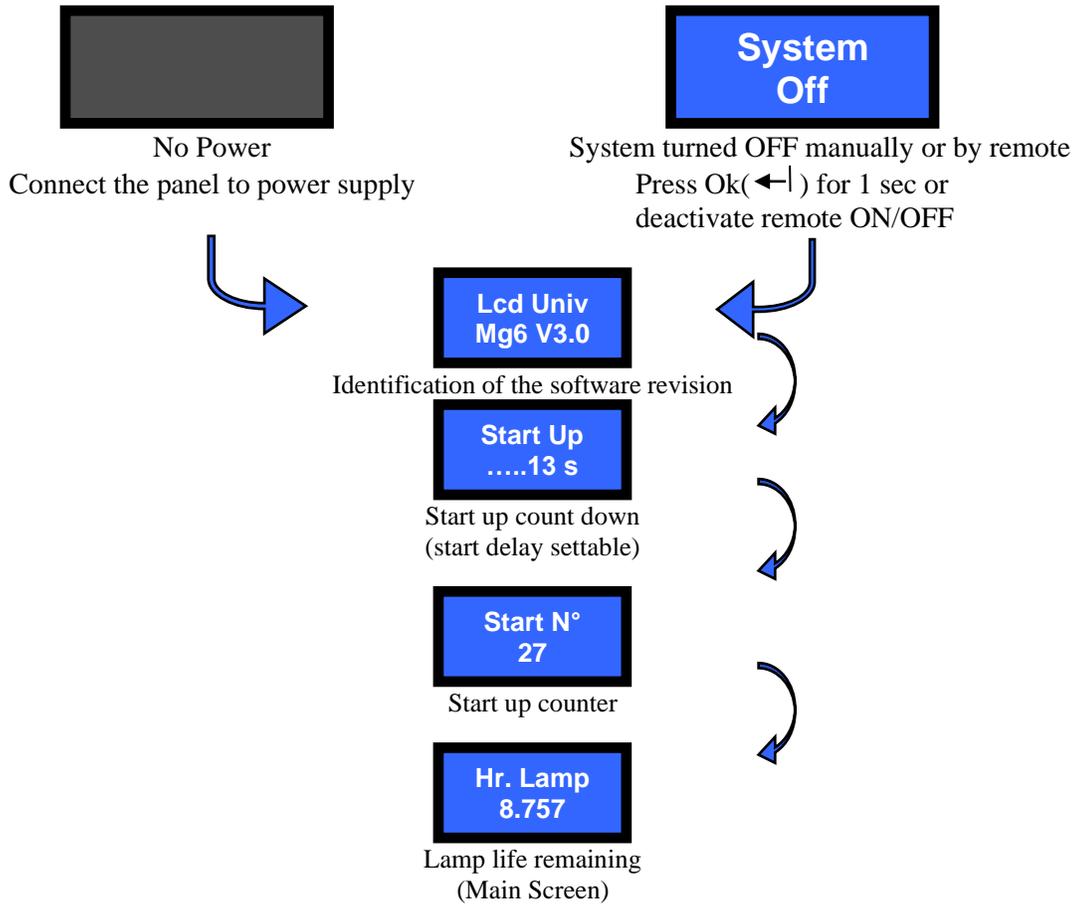


LCD DISPLAY MESSAGES – Shut Off:

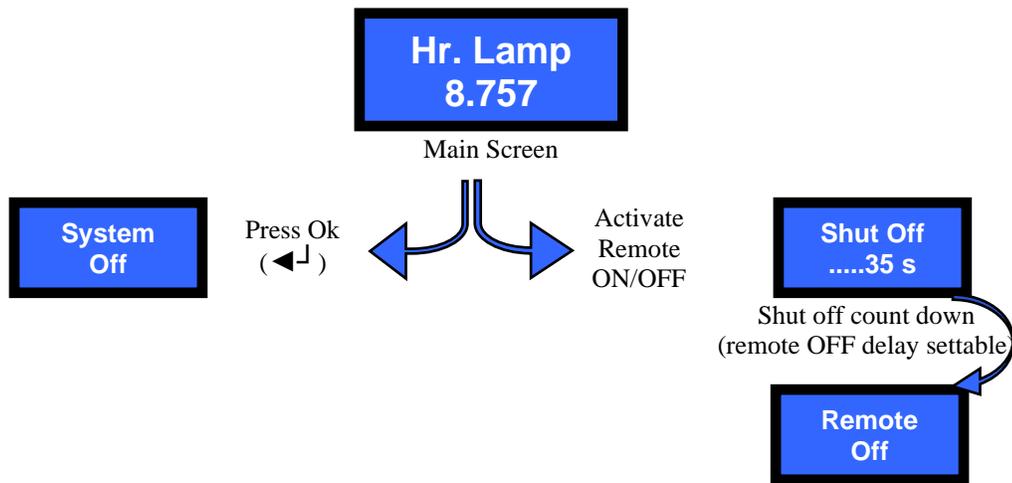

LCD DISPLAY MESSAGES – Main MENU:

The main MENU describes the main functions of the control Panel

To enter the main menus push one of the 3 buttons. Move through the menus using up and down arrow buttons.

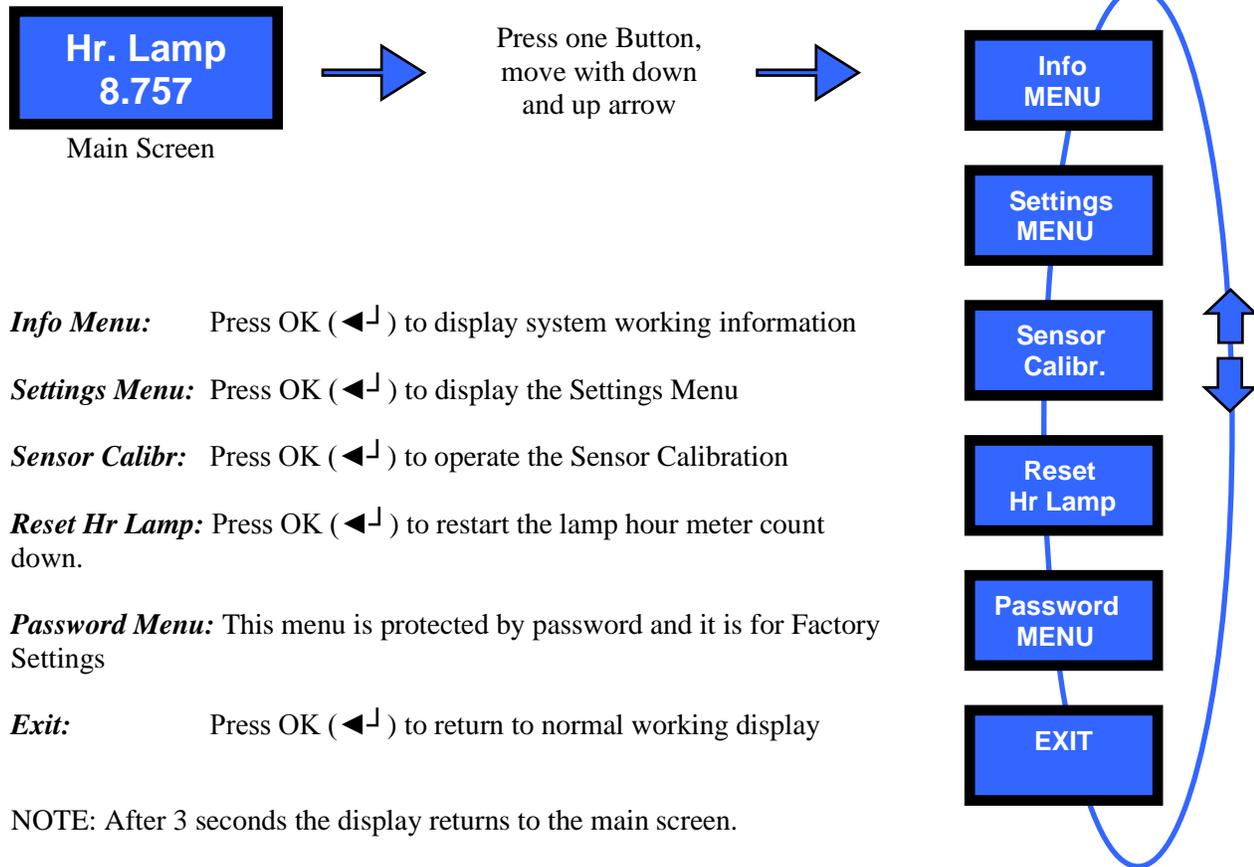

Info Menu: Press OK (◀↵) to display system working information

Settings Menu: Press OK (◀↵) to display the Settings Menu

Sensor Calibr: Press OK (◀↵) to operate the Sensor Calibration


Reset Hr Lamp: Press OK (◀↵) to restart the lamp hour meter count down.

Password Menu: This menu is protected by password and it is for Factory Settings


Exit: Press OK (◀↵) to return to normal working display

NOTE: After 3 seconds the display returns to the main screen.


LCD DISPLAY MESSAGES – Info MENU:

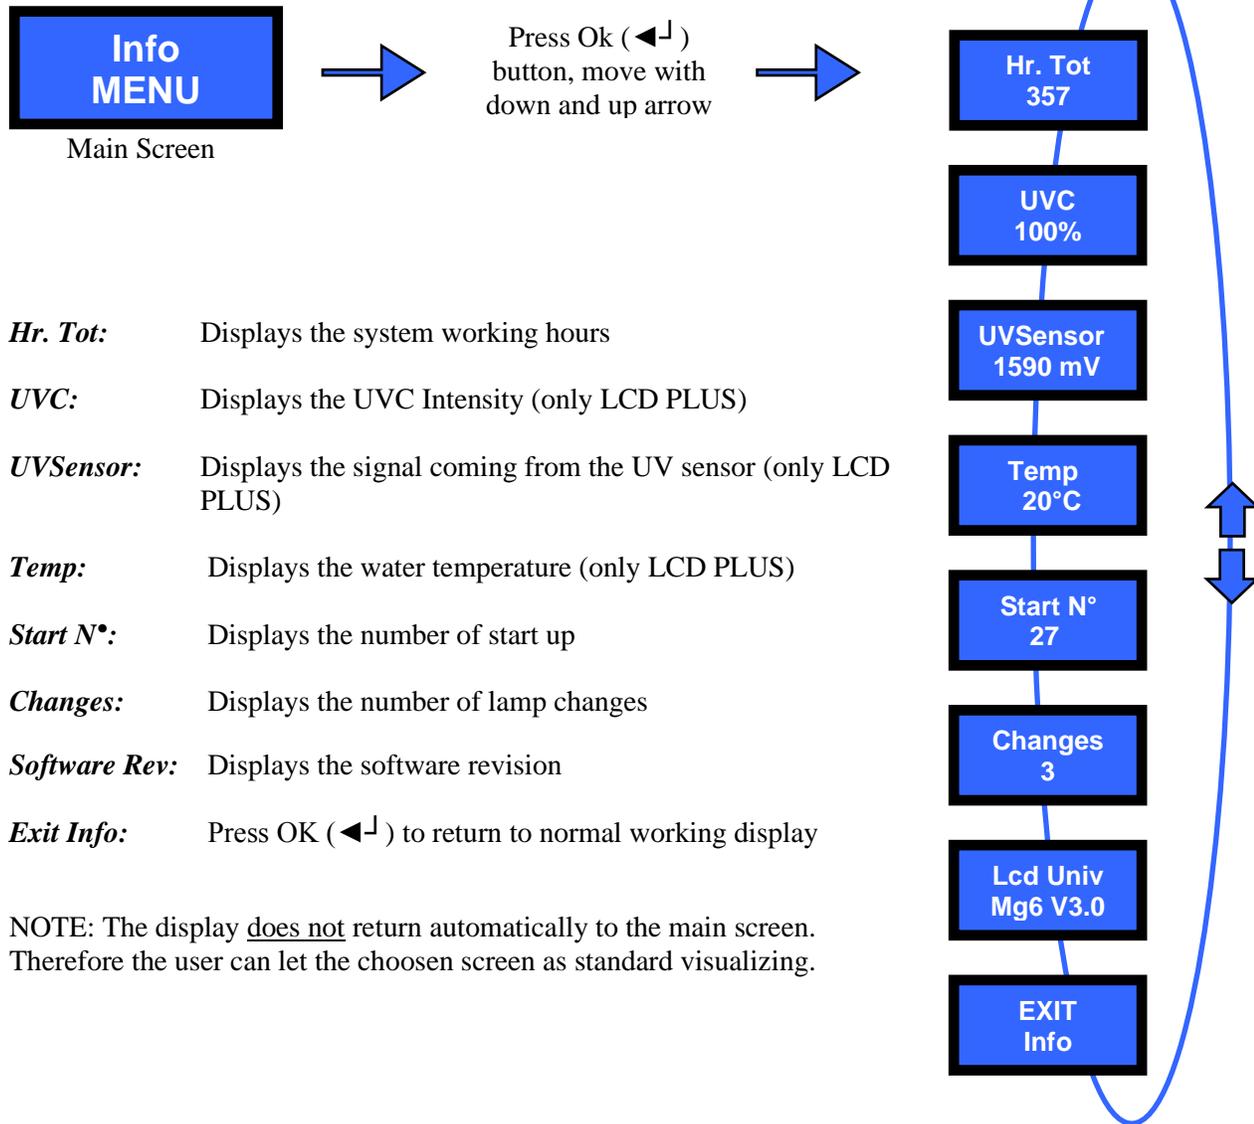





LCD DISPLAY MESSAGES – Settings MENU:

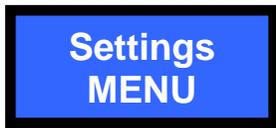


Main Screen

 

    Press Ok (↵) button, move with down and up arrow



- ON delay:** Press OK (↵) to set the start delay. This value is expressed in seconds. It allows to start the lamp and wait for the alarm warm up without alarms.
Increase/decrease values pressing arrows
- UVC 20mA:** Press OK (↵) to set the correspondence between 20 mA output and irradiance read from the UV sensor. The 4/20 mA output is optional on request available on the LCD PLUS models.
Increase/decrease values pressing arrows
- Remote:** Press OK (↵) to set the remote ON/OFF working between NO and NC (NO = Normally Open, NC = Normally Closed).
Change settings pushing OK.
- OFF delay:** Press OK (↵) to set the remote shut off delay. This value is expressed in seconds. In case the remote ON/OFF is connected to a flow switch then this settings avoid shut OFF if water flow stops only for few seconds.
NOTE: To high frequency of ON/OFF decreases the lamp lifespan. Max 3 ON/OFF cycles per day are allowed.
This setting decreases the useless shut off for short water flow stops
Increase/decrease values pressing arrows
- Buzzer:** Press OK (↵) to set the 230V output in buzzer mode. If a buzzer is connected to the 230V alarm then, in case of alarm the 230V output is set to drive the buzzer in intermittent operation (5 seconds ON, 5 minutes OFF).
- Stop In:** Press OK (↵) to set how soon the system will turn off automatically. After the first turn off the system will turn off the next day at the same time. Increase/decrease values pressing arrows. If Stop In value is set = 0 then the timer is deactivated.
- Stop For:** Press OK (↵) to set how long the system will remain off before automatic restart. Increase/decrease values pressing arrows. If Stop In value is set=0 then the timer is deactivated.
- Calibr. T:** Press OK (↵) to set the water temperature if the sensor is not calibrated

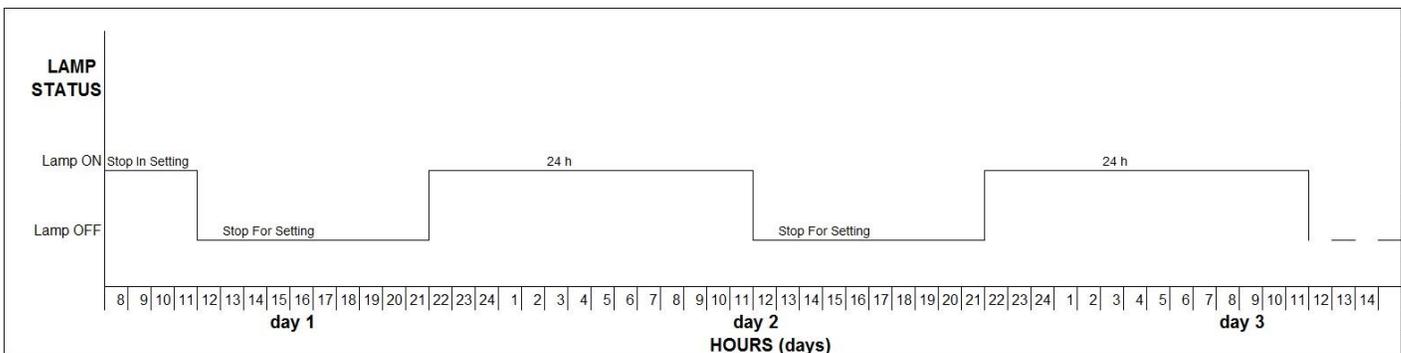


Timer Diagram example with *Stop In* set to 4 hours and *Stop For* set to 10 hours.

Exit: Press OK (↵) to return to normal working display
NOTE: After 3 seconds the display returns to the main screen.


LCD DISPLAY MESSAGES – Sensor Calibr. (Only PLUS version):

This operation must be done at the first start up and on every lamp replacement, with quartz sleeves and sensor measuring window clean. Wait 5 minutes from the lamp start before operating the sensor calibration.

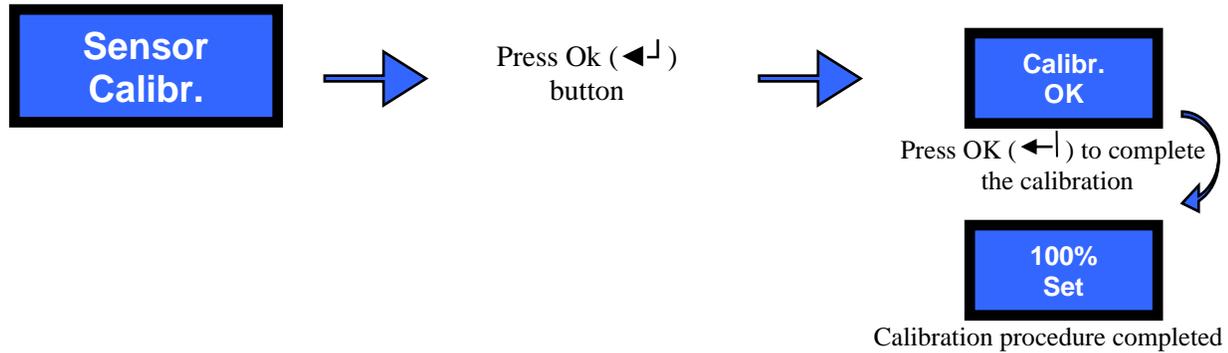


LCD DISPLAY MESSAGES –Reset Hr Lamp.:

This operation starts the count down of the lamp life hour meter. This operation must be done at the first lamp start and on every lamp replacement

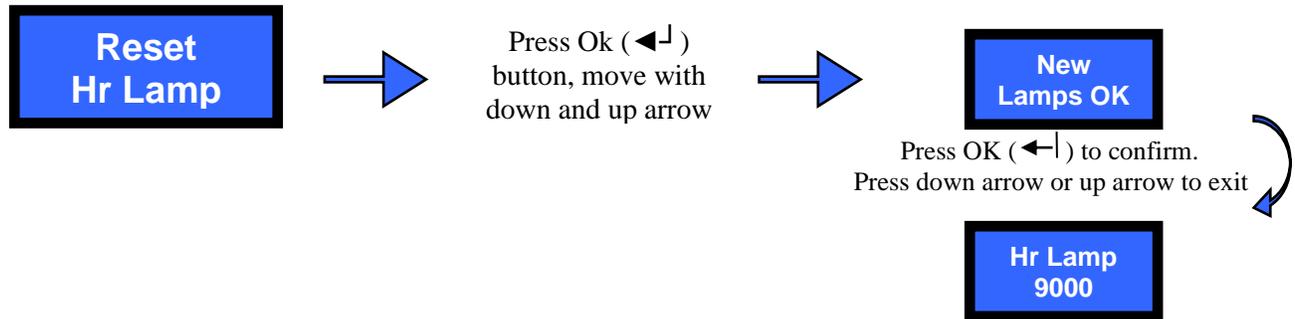

 LCD DISPLAY MESSAGES – Alarms/troubleshooting:



In case of any alarm the red LED is flashing.

List of alarms:



Indicates the lamp failure. If the system has 2 lamps the failed lamp is identified. Check:

- Connection to the lamp
- If lamp has failed
- If lamp starter has failed.



Indicates that the count-down hour meter of lamps life comes to zero. In such case replace the lamps and restart lamp hour.

Only for Plus



Indicates low irradiation. Check:

- If lamp life has expired
- If quartz sleeves are dirty
- If sensor windows is dirty
- If water quality has changed



Indicates high temperature in the UV chamber. This may happen when either there is no flow or there is air in the UV chamber. In such cases the system switches off.

Reset the alarm: Push OK(◀↵) for 5 sec to put the system in standby then press OK (◀↵) again to restart the UV system.

NOTE: In case of high temperature the panel turns off the lamp and this remains off even if temperature drops below the threshold level. This is necessary in case of no flow to avoid this cycling:

Lamp ON→ High Temperature→lamp turned off→Temperautre lower then threshold→ lamp started again→ High Temperature→...

This can destroy the UV lamp, in case the user can accept this risk then ask the factory for setting change instructions.

LCD DISPLAY MESSAGES – Other Problems:



Display OFF in case of no electrical feeding or burned fuses

8. Maintenance

The UV System of DOMESTIC SERIES have been projected and realized by S.I.T.A. Srl with simple and functional principles which make the checking procedures and the periodical servicing particularly easy.

The main points which characterize the ordinary servicing are the following: check quarterly the quartz sleeves, which contain the UV lamps, in order to ensure the maximum disinfection, for the cleaning.

Maintenance work may only be carried out by personnel who have been trained and authorized for this work by the owner and/or user. The owner and/or user must ensure that the maintenance personnel are familiar with the safety measures and regulations, and that they also comply with them, in addition to having read and understood the operating instructions.

Only original replacement parts from the supplier must be used.

The following are the recommended service intervals for replacement parts:

UV lamp change - once per 9000 hours

UV quartz sleeve clean - frequency depends on the quality of the water

O-ring for quartz sleeve-once per year

Procedure for the UV lamp replacement (9000 h max.)

- 1) Disconnect the electrical box from the electrical power supply
- 2) Lift the cover slightly turning, carefully loosen the electrical 4-pins connection and extract the lamp from the quartz sleeve
- 3) Remove the lamp from the packing, handling it carefully by its ends or using gloves
- 4) Insert the new lamp into the quartz sleeve of the sterilizer
- 5) Connect the lamp to the electrical connection and put again the cover
- 6) Connect again the equipment.

Important!

For lamps replacement it is not necessary to stop the water flow and drain the UV chamber

Procedure for the quartz sleeve cleaning

- 1) Disconnect the electrical box from the electrical grid and turn off water
- 2) Remove the lamp, as for the replacement
- 3) Depressurized and drain the UV system
- 4) Unscrew the sleeve-bolt and extract the quartz sleeve with care
- 5) Clean the quartz sleeve by wiping it with a cloth soaked with an acid solution such as vinegar or lemon
- 6) Reassemble the sleeve being sure to center the guide-spring fixed on the bottom, put the o-ring on the quartz sleeve, then tighten the sleeve-bolt; place the o-ring in the seat of the sleeve-bolt, insert the sleeve inside it, till it leans, then screw on the S/S chamber.
- 7) Turn on water checking for eventual leaks
- 8) Mount again lamp, its electrical connection and cover
- 9) Turn on the UV system.

9. Warranty Conditions

WARRANTY CONDITIONS

SITA works in compliance with ISO 9001-2015 quality procedures and subjects all equipments to accurate checks and tests.

The SITA supplies and progressing are anyway guaranteed only in the limits of technical specifications and request and/or of the certificates and/or of the specific checks as agreed, for 24 months from the delivery date or 30 days from the purchase date, provided that eventual defects are stated as fixed by art. No. 1495 of the civil code.

The stainless steel chamber is covered by warranty of 5 years only if used for compatible liquids and correctly installed.

In no case the integral replacement of the product is foreseen and any responsibility of Sita is excluded for delays in the delivery of the goods to the customer, for claims of third parties towards the customer, for losses of goods, costs (installation, servicing and maintenance, transports, and so on) and damages of the customer due to the defect.

Moreover the product repaired or tampered by non-authorized third parties, and the product on which an intervention has been made for defect of for convenience tests, is excluded from the warranty.

Repairs are normally carried out in SITA warehouse or in authorized after-sales service centers signalled by SITA.

The warranty does not cover:

1. Accidental breakages due to the transport.
2. Breakages due to the use of equipments not in compliance with what is indicated on the use and maintenance manual or to carelessness.
3. Breakages to the connection to a power grid fed with a tension different than the foreseen one ($\pm 10\%$ of the nominal value as fixed by CEI rules)

DO NOT TAMPER THE ADHESIVE LABELS OF IDENTIFICATION

The adhesive label with the QC (Quality Control) number must be intact and readable; such number allows to enter the data bank of tests and to find the values obtained in the electrical test of the equipment.

The adhesive label with the S/N (Serial Number) number must be intact and readable; such number allows to enter the data bank of tests and to find the values obtained in the hydraulic test of the equipment.

In case of dispute the court of Genova will be competent.

10. Declaration of Conformity EC

Unit produced in the factory of:

S.I.T.A.
Società Italiana Trattamento Acque

EC DECLARATION OF CONFORMITY

The undersigned hereby declares, under full responsibility, that the unit:

UV DISINFECTION SYSTEM

DOMESTIC LCD SERIES

Mod. 405-412-440-450-480-550-80/2 LCD-LCD PLUS

Complies with what is foreseen by

- 2014/35/UE (low voltage directive)
- 2014/30/UE (electromagnetic compatibility)
- 2015/863/UE (RoHS3)
- 2012/19/UE (WEEE)
- IEC -EN 60204-1 norms (safety of machinery-electrical equipment of machinery)
- IEC -EN 55022 norms (characteristics of radio interference)
- D.M. 14 June 2017 (Implementation of Directive 2015/1787/UE on the quality of water intended for human consumption)
- 2014/68/UE (art.4 comm.3) (PED)

The validity of CE marking is subordinated to the equipment integrity. Any modification, if not authorized, will cancel the use of the CE marking. This will occur in case the relevant risks have not been previously analyzed by our Company, and a new EC Declaration of Conformity has been issued.